

EZRackPLC™ Automatic I/O Configuration

Configure your EZRack PLC I/O modules automatically when you are connected over USB, Ethernet, EZ WiFi or Serial programming ports.

- Auto detect discrete, analog, and speciality modules within EZRack PLC Designer Pro.
- Automatically assigns respective tag address range.

Option to automatically or manually configure I/O in hardware setup menu

Automatic I/O Configuration
Connect to the EZRack PLC & automatically detect your I/O modules and addresses in the local base

